

Distributed by Obar Systems Installation & Warranty

Read these instructions completely and retain for future reference.

- 1. Warning! The use of this fan may affect combustion devices, always check for a backdraft on all combustion devices before and after installation.
- 2. Warning! This fan is not intended for use in hazardous environments where a motor spark could ignite combustible or flammable materials.
- 3. All wiring must be performed by a licensed electrical contractor in accordance with the National Electrical Code and all local and state codes governing the municipality in which it is installed.
- 4. The GBR series blowers are intended for use and installation by professionals familiar with installation and design of systems for the remediation of radon and volatile organic compounds. Unqualified or unlicensed individuals should not undertake the installation or service of this product.

INSTALLATION

The installation instructions provided are for guidance only, any installation should meet all state and local codes and guidelines.

- 1. Temperature restrictions: The GBR SOE/UD will run and start in a temperature range from -20 to 180 degrees F. The GBR HA will run at a temperature of -20 to 180 degrees F but may not start if the motor temperature is below 0 degrees F at time of startup.
- 2. Ground water restrictions: The blower should not be installed at a height above water table that is less than the vacuum setting for the blower, if the water table is unknown then the base of the slab should be used as a default. The GBR series is a high vacuum blower and will draw water into the assembly and damage the impeller and motor if not properly installed.
- 3. Speed control: The GBR series blowers have a built in speed control that can be used to field adjust the vacuum on your system. These should only be adjusted by an experienced installer familiar advanced systems design and installation. For information regarding on site adjustments please contact Obar Systems for further information.
- 4. Enclosure: It is not recommended that the enclosure be opened except for repairs and adjustments. Contact Obar Systems before removing the cover.
- 5. Mounting: The fan should be mounted in a vertical orientation with the discharge pointing

upward. The inlet and discharge should be attached with a PipeConx or similar flexible connector of the appropriate size. The connector should provide a gap of 1.5 inches between the inlet pipe and inlet fitting and discharge pipe and discharge fitting. This will allow for motor assembly replacement in future repairs. The GBR comes with wall fastening lugs that provide for a flush installation on a flat even surface. Optional roof and wall mounts are available and are designed to reduce installation times dramatically. Contact Obar Systems for additional information on mounting systems. The fan should be located in an area that provides easy access and does not obstruct the operations of the building to which it is attached.

6. Discharge: Make sure the discharge meets or exceeds National guidelines and local codes for the installation and venting of Radon and or VOCs (Volatile Organic Compounds). In the event that there is the possibility of debris entering the discharge of the fan, it is recommended that a guard be installed to protect the blower from damage.

<u>Warranty</u>

Subject to any applicable consumer protection legislation, Obar Systems warrants the GBR series fans for 12 months from the date of purchase.

Obar systems will repair or replace any fan which fails due to defects in materials and workmanship. A RMA must be obtained and proof of purchase is required to be serviced by this warranty.

This warranty is contingent upon the fan having been installed as per the installation requirements set forth by Obar Systems and in accordance with the requirements of federal and state authorities governing the installation systems designed for radon and volatile organic compounds.

Obar systems is not responsible for the installation, removal or delivery costs associated with this warranty.

Except as stated, the GBR series are provided without warranty of any kind, either expressed or implied, including without limitation, implied warranties of merchantability and fitness for a particular use.

Obar systems is in no way responsible for any direct or indirect damages relating to the performance of the GBR series fan. Any liability shall not exceed the purchase price of the unit. The sole remedy under this warranty shall be the repair or replacement of the unit

Contact Obar Systems to obtain a RMA (Return Material Authorization) number for any and all warranties. If return is required, the customer is responsible for all freight charges.

Obar Systems Inc. 2969 Route 23 South Newfoundland NJ 07435 800 949 6227