


GBR Battery Alarm Programing Guide

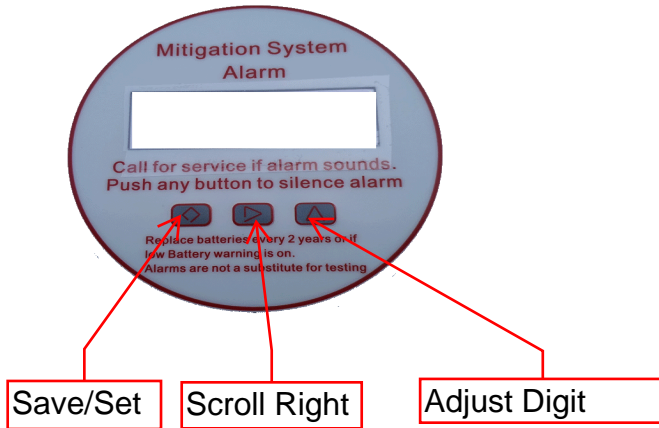

P081 Pressure Units

(Preset to Inches of WC)

1. Activate **P081** programing
2. Press **Adjust Digit** button to select a unit.
1= Pascal, 2=K Pascal, 3= mbar,
4= mm W.C., 5= in W.C.
3. Hold **Save/Set** button to input new settings

P075 Refresh Delay

(Preset to refresh every 5 Sec)

1. Activate **P075** programing
2. Press **Adjust Digit** button to select refresh delay.
Refresh delay choices are 0.5, 1, 5, 10 seconds
3. Hold **Save/Set** button to input new settings

Display is factory set to:

inches of W.C. Refresh: every 1 second.

Available Programs

The GBR series gauge are programmable for the following changes indicated by P# and setting #

P081 Display pressure readings in units of: #1 pascals, #2 K-pascals, #3 mbar, #4 mm water column, #5 inches water column

P075 Refresh display: 0.5, 1, 5, or 10 seconds

Steps to Access a Program

In each case to change a program setting use the following initial steps:

Press **Save/Set** button and **P000** will appear. Press **Scroll Right** button to Select first digit **0**. Press **Adjust Digit** button to enter **program number** for that digit.

Press **Scroll Right** button to select second, third or first digit and press **Adjust Digit** button to set the **program number**.

Once **program number** is set, press **Save/Set** Button to begin adjusting the program setting to the desired function.

After inputting the number representing the desired function, hold the **Save/Set** button to input the setting for that function and the gauge will return to displaying the system pressure.

To Re Zero Display

1. Disconnect tubing from vacuum.
2. Hold **Scroll Right** button for 5 seconds
3. Display should read zero
4. Reconnect tubing into the suction pipe

Turn on display

1. Press any key

Turn off display

1. Hold **Save/Set** button for 3 secs

P810 Factory Reset

(Factory Setting is alarm off)

1. Activate **P810** programing
2. Hold **Save/Set** button to revert to Factory Settings

P076 Sleep Setting

(Factory Setting is 10 min)

1. Activate **P076** programming
2. Press **Adjust Digit** to select 0 (always on), 1 min, 5 min, 10 min
3. Hold **Save/Set** button to input new settings.